1. CHANNEL LIST RESET

IMPORTANT

Please follow the guide below on how to reset your channel list.

1 Press the Menu Button on your remote and navigate to **Tools**.

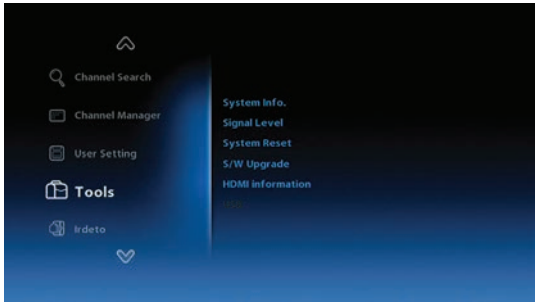

2 Use the UP and DOWN arrows on your remote to navigate to **System Reset** and then press OK.

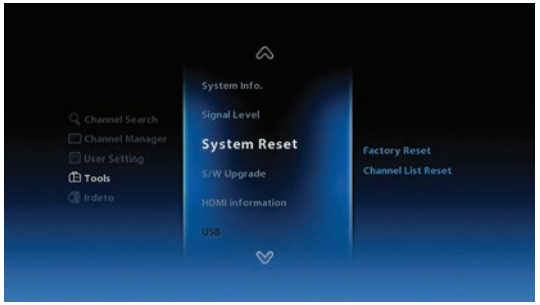

3 Navigate to **Channel List Reset** and press OK.

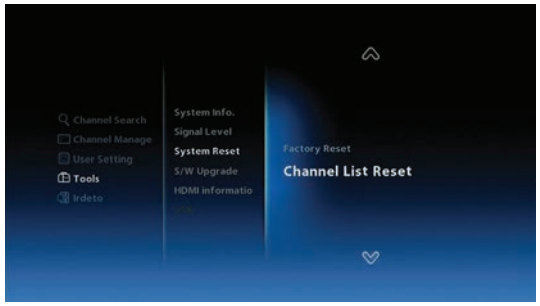

4 Press **OK** again.

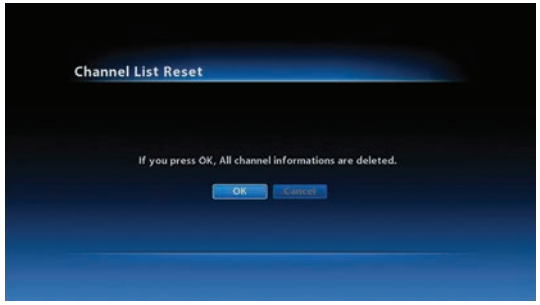

5 Enter **0000** for the password.

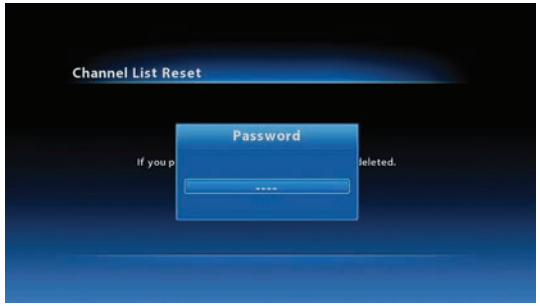

6 Press **OK** to complete the Channel List Reset.

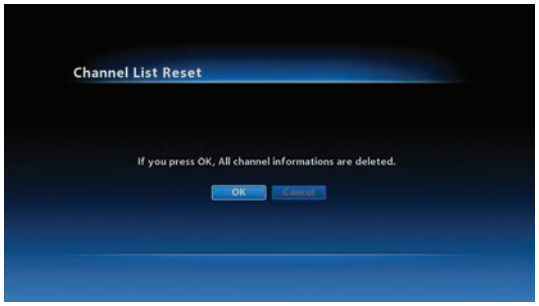



TV PLUS PTY LTD
PO BOX 1200, BOX HILL 3128 VIC
T (03) 9998 3999
www.tvplus.com.au

Where it all comes together

TV PLUS

2. MANUAL RESCAN

IMPORTANT

Please follow the guide below on how to manually rescan your set top box.

1 Press the Menu Button on your remote and navigate to **Channel Search**.

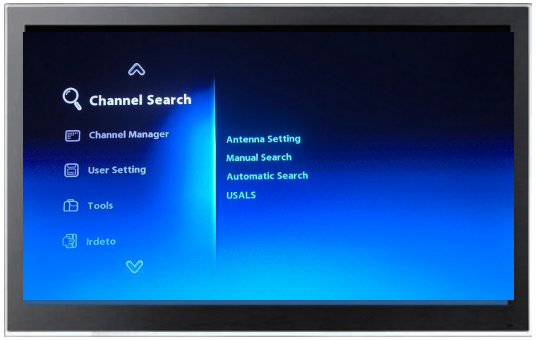

2 Navigate to Manual Search and press **OK**.

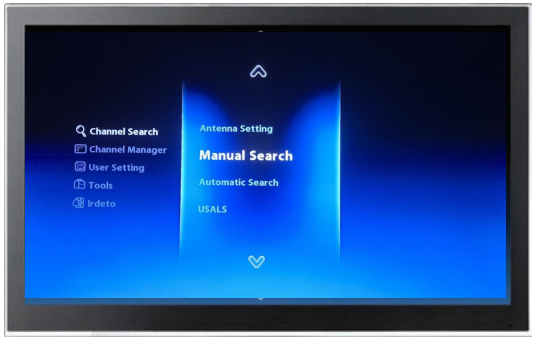

3 Highlight the frequency line and and then type the following frequency "**12611**" (with the numbers on your remote).



4 Use the arrow down on the remote and highlight **Transport Spec**. Press **OK** to edit then press the left arrow until you see **DVB~S2** then press **OK**.

The upper right signal and strength bars should now be white and show above 70% and 50%.



5 Once confirmed press the **Red Button** on your remote (the one next to the green button).

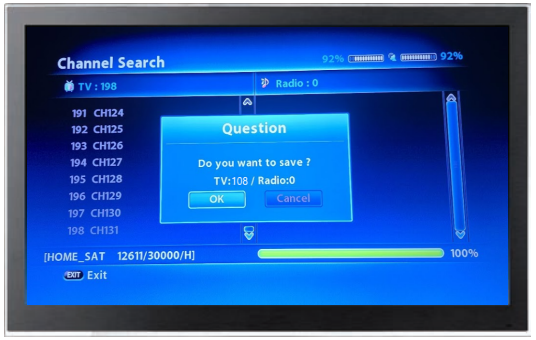

6 Now wait for the set top box to scan the frequency for the updated channel list.
A popup box will come up, please click on **OK**.



NOTES

New Frequency:

Satellite:	Eutelsat 172B
Frequency:	12611
Symbol Rate:	30000
Polarization:	HOR
Transport Spec:	DVB-S2
FEC:	5/6

Channel List:
1-108 on the new 12611 frequency



TV PLUS PTY LTD
PO BOX 1200, BOX HILL 3128 VIC
T (03) 9998 3999
www.tvplus.com.au

Where it all comes together